

Select Contour Type:	<div>F(50,50) Service Contour -- FM and NTSC (analog) TV F(50,10) Interfering Contour F(50,90) Digital TV Service Contour</div>
Select Channel Range: (not TV Virtual Channel)	<div>FM Radio or TV Transmit Channels 2-6 TV Transmit Channels 7-13 TV Transmit Channels 14-69</div>
Find This:	<div>Field Strength, given a Distance (in km) Distance, Given a Field Strength (in dBu) FM ERP, given Distance and Field Strength [F(50,50) Service Contour]</div>
<div>.030</div> ERP (kW)	<div></div> Distance (km)
<div>130</div> HAAT (meters)	<div>140</div> Field (dBu)
<div>Find Result</div> <div>Clear Form</div>	

Results:

Calculated Distance = **0.004 km**

Free Space equation used to compute distance.